 




## USING FAST-FORWARD AND REWIND

To fast-forward or rewind the tape, press ◀▶ or ▶▶. The following table shows which button to press, based on the current setting of the ◀▶ switch.

◀▶ Switch Setting	To Fast-Forward	To Rewind
▶	▶▶	◀◀
◀	◀◀	▶▶



When the SCP-79 reaches the desired portion of the tape, press **STOP**. Then press **PLAY** to resume playback.

